



**Transmit Lead Zero on UPC-E** – This option will transmit a zero before each UPC-E bar code.



**Do Not Transmit Lead Zero on UPC-E**



**Convert EAN-8 to EAN-13** – The scanner will transmit five zeros before the bar code to convert EAN-8 to EAN-13.



\* **Do Not Convert EAN-8 to EAN-13**



\* **Transmit UPC-A Number System**



**Do Not Transmit UPC-A Number System**



\* **Transmit UPC-A MFR #**



**Do Not Transmit UPC-A MFR #**



\* **Transmit UPC-A ITEM #**



**Do Not Transmit UPC-A ITEM #**



\* **Transmit EAN-8 Check Digit**



**Do Not Transmit EAN-8 Check Digit**



\* **Transmit EAN-13 Check Digits** – The scanner will transmit EAN-13 Check Digit.



**Do Not Transmit EAN-13 Check Digit.**