
Need To Start Over?

Scan the *Recall Defaults* bar code to erase all previous settings and return the scanner to its factory default communication protocol. Keyboard Wedge interface scanners will load keyboard wedge defaults. All other scanners load RS232 defaults.

Note: Honeywell manufactures several products for OEM applications. These OEM products are configured with custom OEM defaults, which may use a different set of defaults than the standard set of factory defaults. See page 23–1 for additional information on custom defaults and how they affect factory defaults.

Recall Defaults

