

Scan Mode

Auto Sense Mode off


Decoding by pulling the trigger of the scanner when auto sense mode is off. It's default mode.



Off (Default)

Auto Sense Mode on

The scanner can sense barcode for decoding automatically.

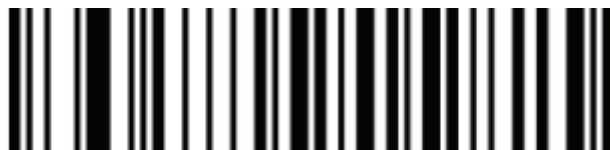

On

Repeat Barcode Detection

Use for decode same barcode of interval time, it will decode only one time if not exceeded set time.



500ms



750ms (Default)



1s



2s